

club^{3D}

www.club-3d.com

SenseVision DisplayPort™ Video Splitter



senseVISION
CONNECT AND DO MORE



SenseVision DisplayPort™ Video Splitter

USER INSTRUCTIONS

DisplayPort™ to 2x DisplayPort™

CSV - 5200



SenseVision DisplayPort™ Video Splitter

CSV-5200
DisplayPort™ to
2x DisplayPort™ 1.2

senseVISION
CONNECT AND DO MORE




Dual Monitor up to
2560X1600p @ 60Hz



SenseVision DisplayPort™ Video Splitter

- DisplayPort™ 1.2 to 2x DisplayPort™ Splitter for Dual Monitor setup
- Compliant with: DisplayPort™ v1.2a, DisplayPort™ v1.1a, VESA DDM Standard, HDCP V2.0, DisplayId, and EDID V1.4
- Supports main link rates of 5.4Gbps (HBR2), 2.7Gbps (HBR) and 1.62Gbps (RBR) from source
- Supports Two DP++ output ports, or One Dual-link DVI ports, or a combination of ports
- Supported output resolutions : up to 3840x2160p @ 60Hz for Single Monitor and up to 2560X1600p @ 60Hz for Dual Monitors
- Supports AMD Eyefinity™ (SLS) and Duplicate/ Extend Desktop mode Supports 3D Video output
- Supports AMD, Nvidia and Intel Graphics solutions
- Powered by USB Port (no power supply needed)
- Including Mini DP to DP Adapter for maximum compatibility (With Intel NUC, MS Surface Pro etc)



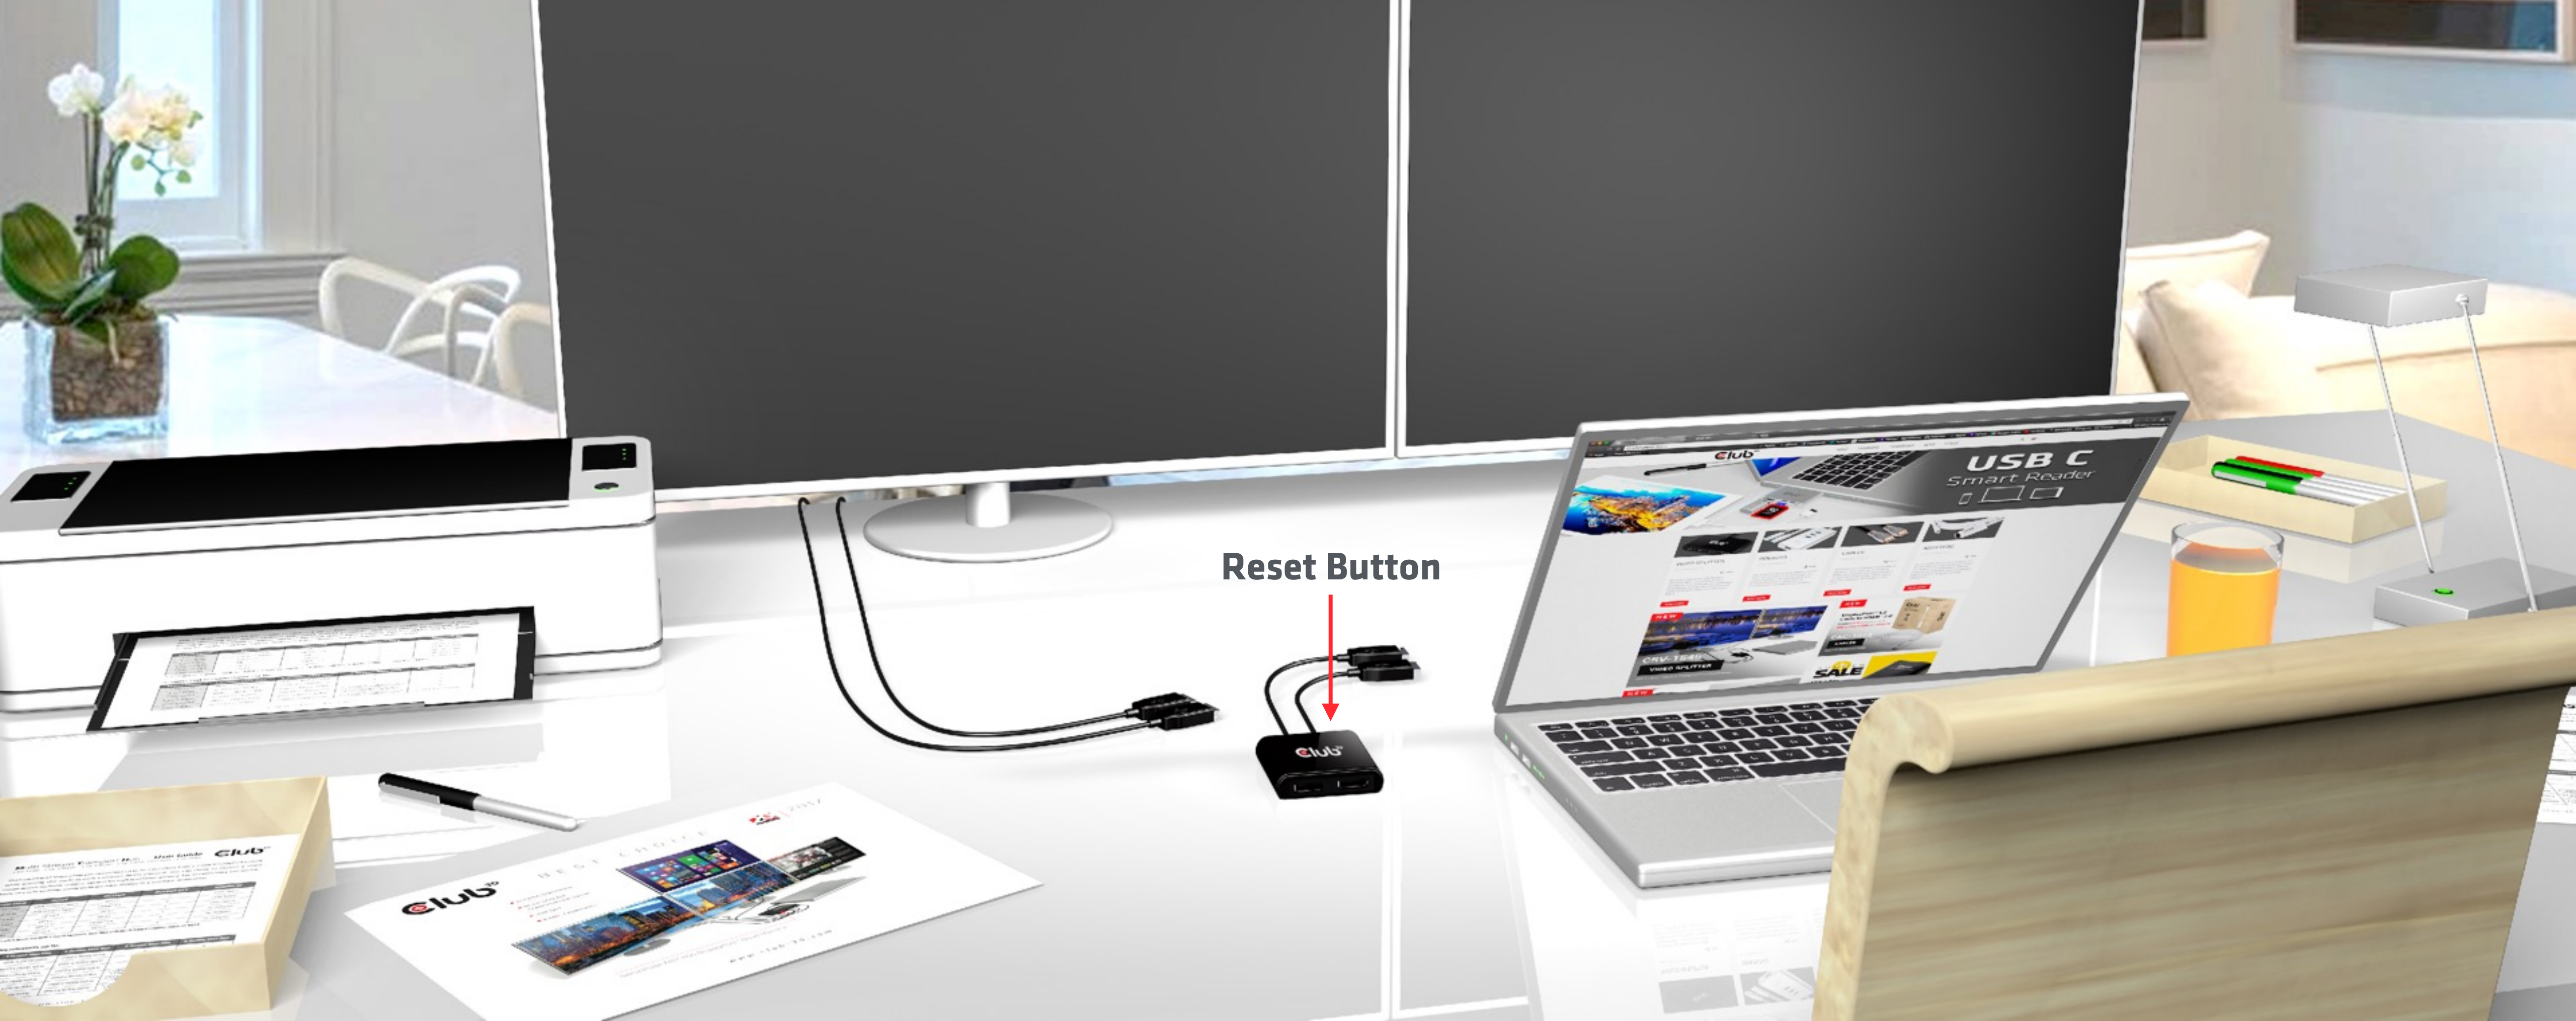


Step 1

senseVISION
CONNECT AND DO MORE

**DisplayPort™ video splitter/ MST, your laptop,
DisplayPort™ cables and two screens**



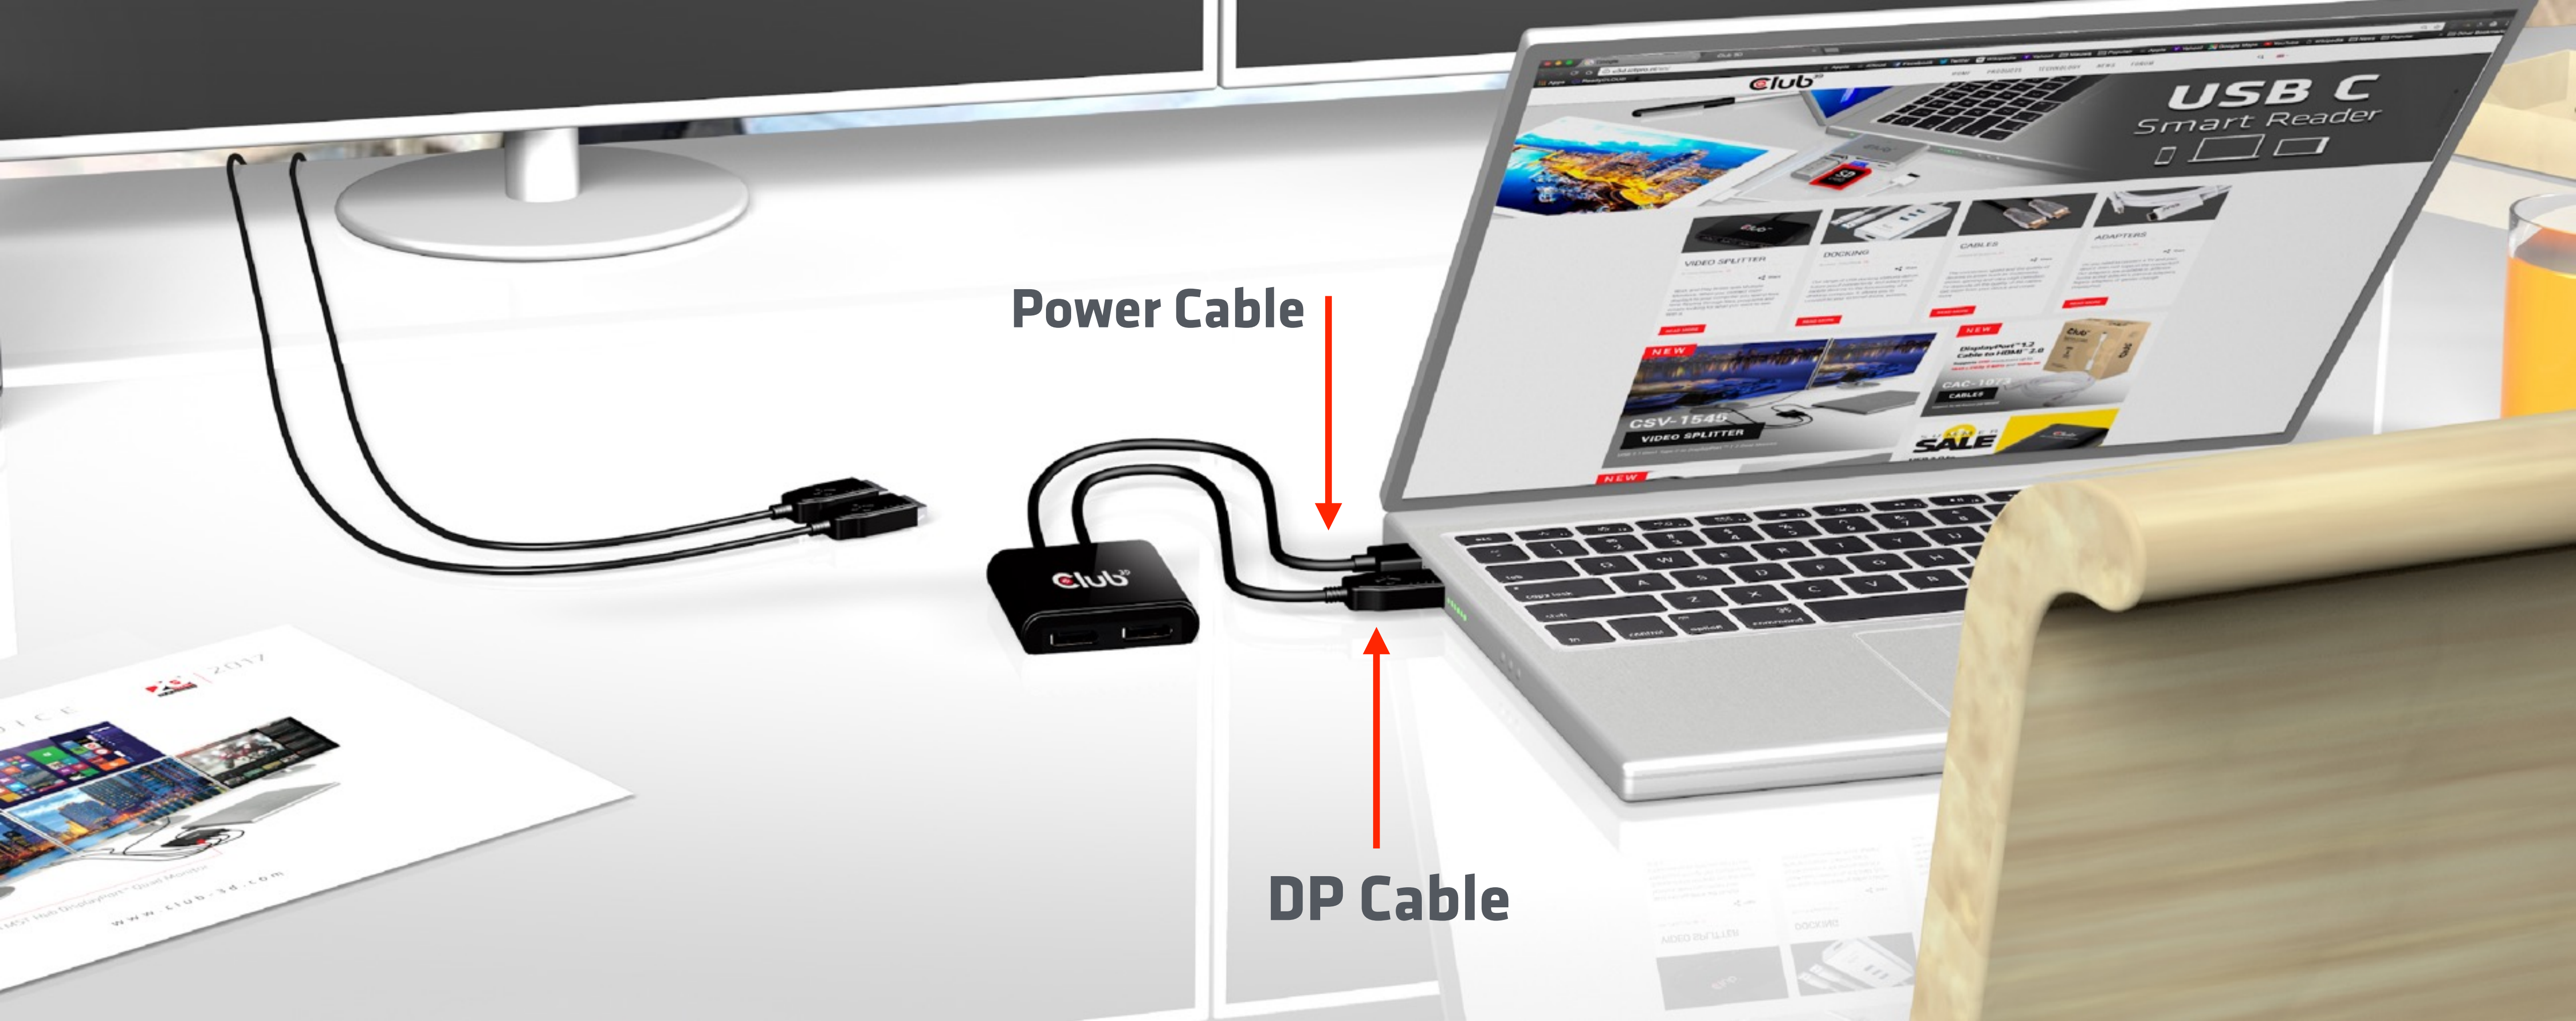

Power Cable


DP Cable

Step 2



Connect your video splitter /MST via the DP to your laptop and if needed the USB plug for power



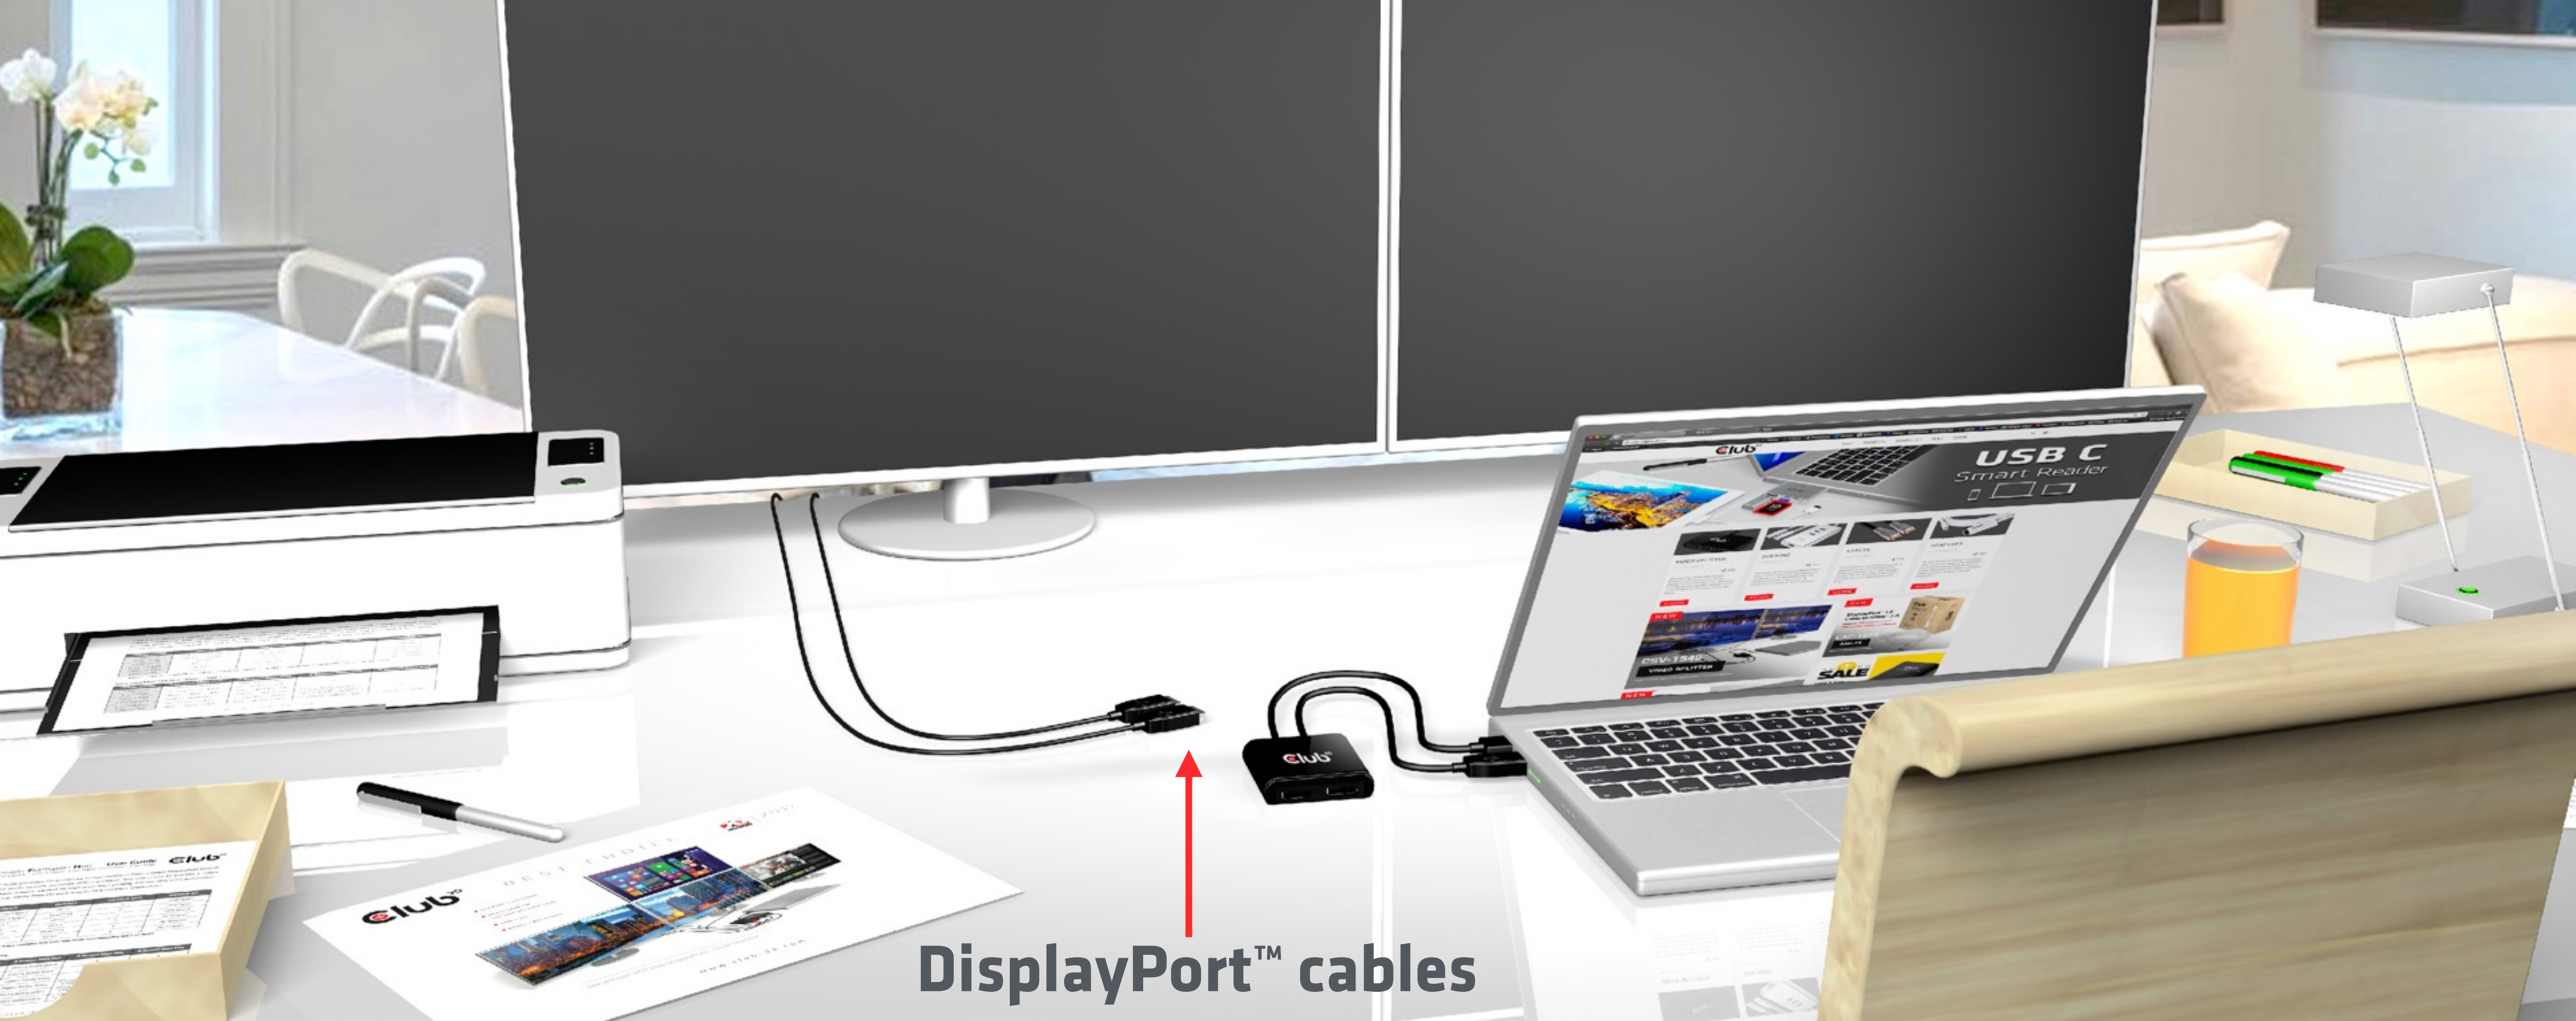

DisplayPort™ cables

Step 3



Connect your video splitter/MST to your DisplayPort™ cables

You can use Club3D cables:
CAC-1066 and CAC-1064





Step 4

senseVISION
CONNECT AND DO MORE

This video splitter/ MST hub supports 2 screens
up to: 2560X1600p @ 60Hz quality

In Extended Desktop Mode





Step 5

senseVISION
CONNECT AND DO MORE

Lean back and enjoy

In Mirror Desktop Mode



senseV^{ision}



CONNECT
AND DO MORE

club^{3D}



Thanks for watching

www.club-3d.com